

STC

FOOT OPERATED VALVE INSTALLATION

INSTALLATION OF FV210 & FV320 FOOT OPERATED VALVES:
Connect the inlet and out as shown in the diagram. The exhaust ports (R, S) do not require connection.

